


BS Securefast LEFT

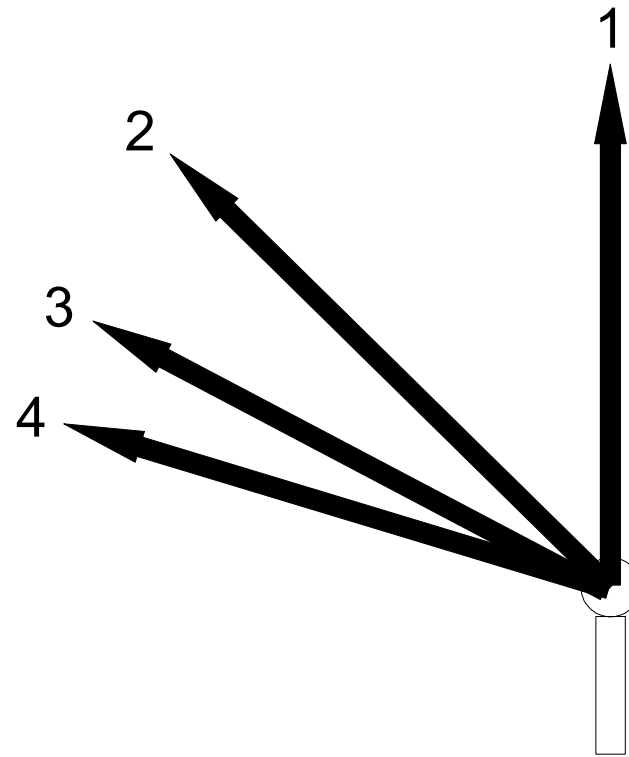

BS Securefast RIGHT

Turn reader key in locking direction  
Number 5 will return under spring pressure